


Empowering your business, one transaction at a time.

Innovative payment solutions delivered with a personal touch.

Accept payment in-person or online with our innovative terminal solutions. Whether you need a stationary, wireless, mobile, or virtual terminal, a payment gateway, or software integration, ECS is the right choice for you.

Diverse Solutions for every scenario.

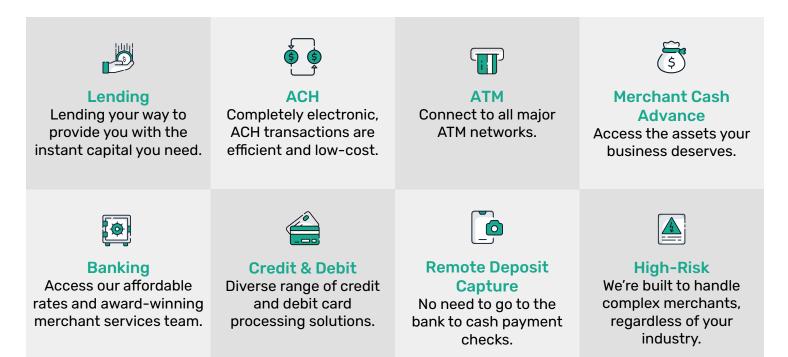

To find out more click here

USA Z1 Retail Quick Reference Guide		Dējavoo ^s Systems
CREDIT SALE 1. From the CREDIT SALE ENTER AMOUNT enter	DEBIT SALE 1. From the CREDIT SALE ENTER AMOUNT Press the F3 Key	TICKET ONLY SALE 1. From the CREDIT SALE ENTER AMOUNT
 credit sale amount and press OK 2. Insert, Tap, Swipe OR Manually Enter Card # If AVS prompts, input AVS information 3. Terminal communicates with the Host 4. Response Displays 	 3. Press the F3 Key to highlight DEBIT and press OK 4. Input the Debit Sale Amount and press OK 5. Insert, Tap or Swipe Card # 6. Input PIN # on PIN Pad and press OK 7. Response Displays 	 Press the yellow arrow key Scroll using the F3 Key to highlight TICKET and press OK Input the ticket Amount and press OK Input previously obtained AUTH CODE and press OK Insert, Tap, Swipe OR Manually Enter Card # Response Displays response Displays
VOID TRANSACTION	RETURN TRANSACTION	SETTLE THE OPEN BATCH
 From the CREDIT SALE ENTER AMOUNT Press the vellow arrow key Scroll using the F3 Key to highlight VOID and press OK Input the Amount to be Voided and press OK Press F1 to confirm Void Amount 	 From the CREDIT SALE ENTER AMOUNT Press the yellow arrow key Scroll using the F3 Key to highlight RETURN and press OK Input the Amount to be RETURNED and press OK Press F1 to confirm Void Amount 	 From the CREDIT SALE ENTER AMOUNT press the OK button three (3) times. Input Password (1234 Default) and press OK Terminal communicates with the Host Response Displays ^{STOP}
 6. Insert, Tap, Swipe OR Manually Enter Card # 7. Response Displays ** If/when prompted for Password, default is 1234 	 6. Insert, Tap, Swipe OR Manually Enter Card # 7. Response Displays ** If/when prompted for Password, default is 1234 	

USA Z1 Retail Quick Reference G	uide	Dejavoo Systems Rethinking Transactions.
VIEW DAILY REPORT	Power On/Off	My Favorites
 From the CREDIT SALE ENTER AMOUNT screen press the OK button Scroll using the F3 key scroll to highlight REPORTS and press OK Highlight DAILY REPORT and press OK Report Displays Use the F3 button to scroll 	Power On: Press and Hold F1 until unit powers on <u>Power Off</u> : Press and Hold F1 until unit powers off	 <u>Adding Favorites</u> 1. Highlight the menu item you wish to save to favorites. Press the F1 Key 2. Press the F1 to select YES 3. Use the F3 key to highlight the menu placement to assign this favorit to. 4. Press OK for
View Summary Report	INDICATOR ICONS	Managing Favorites
 From the CREDIT SALE ENTER AMOUNT screen press the OK button Scroll using the F3 key scroll to highlight REPORTS and press OK Highlight SUMMARY REPORT and press OK Report Displays 	 Battery Strength Indicator WiFi Indicators WiFi Connected 	 From the CREDIT SALE ENTER AMOUNT screen press OK Scroll using the F3 key scroll to select UTILITY and press OK Input Password (1234 Default) and press OK Scroll using the F3 key scroll to select FAVORITES and press OK Scroll using the F3 key scroll to select the desired option to edit and
5. Use the F3 button to scroll	🛞 Wifi Not Connected	press OK STOP
	BlueTooth Connectivity When the Z1 is connected to your mobile Device via bluetooth it will read " Bluetooth Connected " on the display.	 <u>Accessing Favorites</u> 1. From the CREDIT SALE ENTER AMOUNT screen press F1 2. Use the F3 key to highlight Favorites and press OK for
Dejavoo Systems 1129 Northern Blvd Manhasset, NY 11030 1877-358-6797	WWW.DEJAVOOSYSTEMS.COM	Dejavoo